3 *Connect to a network*
Connectez à un réseau • Conecte a una red

1. Select your network from the *Available Networks* list, then click **Connect**. If you do not have security enabled, you will connect to your network automatically. If you do have security enabled, go to Step 2 below.
   Note: *Only click* ***Connect*** *once. The connection process will begin even though the button appears unselected.*

   Note: *If the Dynex Wireless Networking Utility did not open automatically, double-click the Wireless Utility icon in the system tray near the clock.*

2. A. If you have security enabled and you have a Dynex wireless router, you will be prompted to enter a password
   OR
   B. If you have security enabled and you do not have a Dynex wireless router, the *Connect to a secure network* screen opens. Enter the encryption key you created when you set up your wireless router, then click **Connect**. The computer will connect to the network and the *Dynex Wireless Networking Utility* will display the connection status.

Windows Vista® Users: Connect to a wireless network through the Network and Sharing Center, accessible through your computer's Control Panel.

1. Select your network from the *Available Networks* list, then click **Connect**. If you do not have security enabled, you will connect to your network automatically. If you do have security enabled, go to Step 2 below.
   Note: *Only click* ***Connect*** *once. The connection process will begin even though the button appears unselected.*

   Note: *If the Dynex Wireless Networking Utility did not open automatically, double-click the Wireless Utility icon in the system tray near the clock.*

2. A. If you have security enabled and you have a Dynex wireless router, you will be prompted to enter a password
   OR
   B. If you have security enabled and you do not have a Dynex wireless router, the *Connect to a secure network* screen opens. Enter the encryption key you created when you set up your wireless router, then click **Connect**. The computer will connect to the network and the *Dynex Wireless Networking Utility* will display the connection status.

Windows Vista® Users: Connect to a wireless network through the Network and Sharing Center, accessible through your computer's Control Panel.

1. Select your network from the *Available Networks* list, then click **Connect**. If you do not have security enabled, you will connect to your network automatically. If you do have security enabled, go to Step 2 below.
   Note: *Only click* ***Connect*** *once. The connection process will begin even though the button appears unselected.*

   Note: *If the Dynex Wireless Networking Utility did not open automatically, double-click the Wireless Utility icon in the system tray near the clock.*

2. A. If you have security enabled and you have a Dynex wireless router, you will be prompted to enter a password
   OR
   B. If you have security enabled and you do not have a Dynex wireless router, the *Connect to a secure network* screen opens. Enter the encryption key you created when you set up your wireless router, then click **Connect**. The computer will connect to the network and the *Dynex Wireless Networking Utility* will display the connection status.

Windows Vista® Users: Connect to a wireless network through the Network and Sharing Center, accessible through your computer's Control Panel.

P75512-A 07-722

DYNEX™

Wireless Enhanced G Notebook Card
Carte sans fil G amélioré pour ordinateur portatif
Tarjeta Inalámbrica G Mejorado para Computadora Portátil

DX-EBNBC

QUICK INSTALL GUIDE
Guide d'installation rapide • Guía de instalación rápida

Package contents • Contenu de la boîte • Contenido del paquete

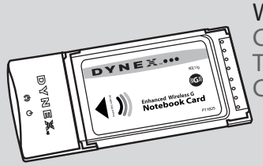

Wireless Enhanced G Notebook Card
Carte sans fil G amélioré pour ordinateur portatif
Tarjeta Inalámbrica G Mejorado para Computadora Portátil

Dynex CD
CD Dynex
CD de Dynex

1 *Insert CD and install software • Contenu de la boîte • Inserte el CD e instale el software*

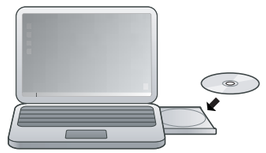

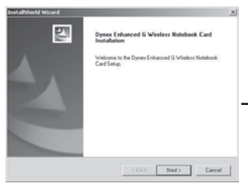

Important Note: Install the software before inserting the card.

1. Insert the Dynex CD into your notebook's CD drive. The *Dynex Wireless Card Installer* screen opens.

Note: *If the Dynex Wireless Card Installer screen does not appear, click* ***My Computer****, then double-click the CD drive where the installation CD has been placed.*

2. Click **Next**. The *InstallShield Wizard Welcome* screen opens.
3. Click **Next**. The *Choose Destination Location* screen opens.
4. Click **Next**. The *Please plug in your Notebook Card now* screen open

Note: *If at any time during the install a warning appears that the software has not passed Windows® logo testing, it is safe to click the* ***Continue anyway****. This software is designed to run on Windows.*

Remarque importante : Installez l'application avant d'insérer la carte.

1. Insérez le disque Dynex dans le lecteur CD de l'ordinateur portatif. La fenêtre de l'application d'installation de la carte sans fil Dynex s'affiche.

Remarque : *Si la fenêtre de l'application d'installation de la carte sans fil Dynex ne s'affiche pas, cliquez sur* ***My Computer*** *(Poste de travail), puis double-cliquez sur le lecteur où le CD d'installation a été inséré.*

2. Cliquez sur **Next** (Suivant). La fenêtre d'accueil *InstallShield Wizard* (Assistant d'installation InstallShield) s'affiche.
3. Cliquez sur **Next** (Suivant). La fenêtre *Choose Destination Location* (Sélection de l'emplacement de destination) s'affiche.
4. Cliquez sur **Next** (Suivant). La fenêtre *Please plug in your Notebook Card now* (Veuillez insérer maintenant votre carte pour ordinateur portatif) s'affiche.

Remarque : *Si pendant l'installation un avertissement s'affiche indiquant que l'application n'a pas été validée lors du test permettant d'obtenir le logo WindowsMD, vous pouvez cliquer sur* ***Continue anyway*** *(Continuer). Cette application est conçue pour fonctionner sous Windows.*

Nota importante: Instale el software antes de insertar la tarjeta.

1. Inserte el disco Dynex en la unidad de CD de su computadora portátil. Aparecerá la pantalla del *"Dynex Wireless Card Installer"* (Instalador de la tarjeta inalámbrica de Dynex).

Nota: *Si esta pantalla no aparece, haga clic en* ***My Computer*** *(Mi PC) y luego haga doble clic en la unidad de CD donde colocó el CD de instalación.*

2. Haga clic en **Next** (Siguiente). Aparecerá la pantalla de bienvenida del *InstallShield Wizard* (Asistente de InstallShield).
3. Haga clic en **Next** (Siguiente). Aparecerá la pantalla "*Choose Destination Location*" (Elegir la ubicación de destino).
4. Haga clic en **Next** (Siguiente). Aparecerá la pantalla "*Please plug in your Notebook Card now*" (Favor conecte su tarjeta para computadora portátil ahora).

Nota: *Si en cualquier momento durante la instalación aparece una advertencia de que el software no ha pasado la verificación de logotipo de Windows® aseguró hacer clic en "****Continue anyway****" (Continuar). Este software está diseñado para ejecutarse en Windows.*

Wireless Enhanced G Notebook Card
Carte sans fil G amélioré pour ordinateur portatif
Tarjeta Inalámbrica G Mejorado para Computadora Portátil

2 *Insert card*
Insérez la carte • Inserte la tarjeta

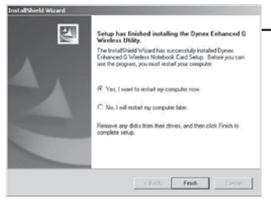

1. Firmly insert the card, label side UP, into your computer's PC card slot until it stops. The *Setup has finished installing* screen opens.

Note: *If your system did not prompt you to insert your Card, do so now.*

2. Click **Yes, I want to restart my computer now**, then click **Finish**. Your computer will restart and the *Dynex Wireless Networking Utility* opens.

~continued on back

1. Firmly insert the card, label side UP, into your computer's PC card slot until it stops. The *Setup has finished installing* screen opens.

Note: *If your system did not prompt you to insert your Card, do so now.*

2. Click **Yes, I want to restart my computer now**, then click **Finish**. Your computer will restart and the *Dynex Wireless Networking Utility* opens.

~continued on back

1. Firmly insert the card, label side UP, into your computer's PC card slot until it stops. The *Setup has finished installing* screen opens.

Note: *If your system did not prompt you to insert your Card, do so now.*

2. Click **Yes, I want to restart my computer now**, then click **Finish**. Your computer will restart and the *Dynex Wireless Networking Utility* opens.

~continued on back